

Notes:



PUBLIC III

Headset, wired

**Operating and Installation
Instructions**



Clarson Apparatebau GmbH
Zeppelinstr. 4 78083 Dauchingen
Postfach 11 63 78080 Dauchingen
Tel.: +49 7720 9956-0
Fax: +49 7720 9956-22
Email: clarson@clarson.de
Internet: <http://www.clarson.de>

Installation of Components

- ① Link the microphone loudspeaker unit 40.054.301 (**jack 2**) with the central unit 40.054.311 (**HEADSET jack**) via patch cable.
- ② Connect the headset to **jack 1** of the microphone loudspeaker unit.


Headset, monaural
Ref. 40.030.011



Headset, binaural
Ref. 40.030.007



Microphone loudspeaker
unit Ref. 40.054.301

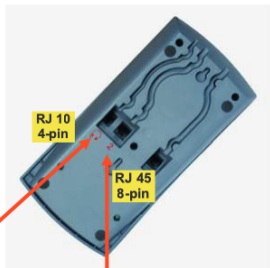

②

①

Patch cable, 3 m
with RJ45 connector (8/8-pin)
Ref. 40.054.327



Central unit
Ref. 40.054.311

RJ 45
8-pin
HEADSET
jack



RJ 10
4-pin



RJ 45
8-pin

Activation / Deactivation of HEADSET Interface

Service Side



Public Side



Activate headset mode:

- Switch the system OFF (button ⊕)
- Push and hold **⊕+** until **LED** above the button flashes **once**
- Switch the system ON (button ⊕)
- Headset mode is now activated
- Microphone and loudspeaker on *service side* are deactivated
- **LED** above button ⊕ flashes (0,5 sec on - 0,5 sec off) indicating headset mode

Deactivate headset mode/
Back to standard mode:

- Switch the system OFF (button ⊕)
- Push and hold **⊕+** until **LED** above the button flashes **twice**
- Switch the system ON (button ⊕)
- System again in standard mode

or

Briefly disconnect the unit
from the power supply

Activate headset mode:

- Switch the system OFF (button ⊕)
- Push and hold **⊕+** until **LED** above the button flashes **twice**
- Switch the system ON (button ⊕)
- Headset mode is now activated
- Microphone and loudspeaker on *public side* are deactivated
- **LED** above button ⊕ flashes (1 sec on - 0,2 sec aus) indicating headset mode

Deactivate headset mode /
Back to standard mode:

- Switch the system OFF (button ⊕)
- Push and hold **⊕+** until **LED** above the button flashes **twice**
- Switch the system ON (button ⊕)
- System again in standard mode

or

Briefly disconnect the unit
from the power supply